


OCTTO Urban-Legend Locking-Grips

INSTALLATION

1. Remove the old grips from the handlebar.
2. Slide the OCTTO grips over the handlebar.
3. With an allen-wrench, gently tighten the set-screws on the grip. Incrementally and alternately tighten each screw.

Final screw torque should be just enough that the grip does not move when twisted.

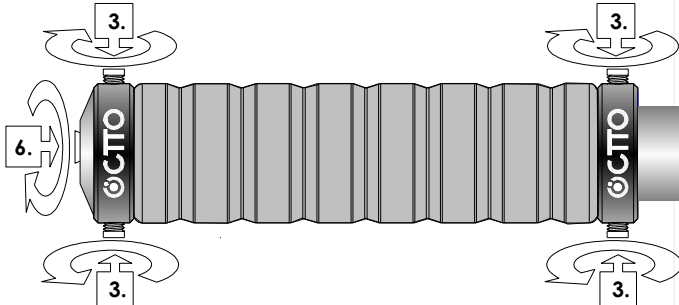

4. Check the grips are tight by twisting them as hard as possible. If they move, repeat step no. 3.
5. Repeat step no. 4 before and after every ride.
6. Slide the end-plugs all the way into the handlebar. With a Phillip's (cross) screw-driver, tighten the screw on the end-plug, until it doesn't move.

WARNINGS!!!

***** If your grips are loose, do not ride the bicycle. Loose grips may cause instability to the bicycle and lead to serious injury or death.**

***** Do not use these grips on carbon-fibre handlebars. The locking-mechanism may damage the fibres.**

octto

urbanLEGEND

OCTTO Urban Legend Locking Grips

FEATURES:

- **Blinging locking grip for city expeditions.**
- **OCTTO Logo Locking Alloy Collars** with exclusive radiused edges, polished with laser-etched logos.
- **Superlight** cushiony foam grip material.
- **Chromed locking-end-plugs** are quite shiny and stay in place.
- **Light Weight** 109g/pair*, including end-plugs. (*average weight, not including screws.)
- **Colours:**
 - Faux-Wood-Foam / Polish Silver-Anodized / Chrome
 - Faux-Wood-Foam / Polish Gold-Anodized / Chrome
 - Faux-Wood-Foam / Polish Black-Anodized / Chrome

Note - for alloy or steel bars only. Not for use with carbon bars.